

Recommendations

- 1) verify that the equipment used to connect our devices to enjoy all the guarantees required under European law;
- 2) use the cables, connectors and quality materials for electrical wiring;
- 3) Products with IP65/68 degree make the wiring / connections with accessories provide the same degree IP of the selected product (available in the catalog);
- 4) In the case of installations outside is not recommended to install the power supplies in the formwork and / or in the junction box without adequate protection

Choice of installation location

The unit should be positioned so that when in use is not subject to direct radiation from the sun or other heat sources . High temperatures reduce the life and efficiency of the components or the LED module .

Relamping and maintenance:

-The relamping must be done with maximum attention avoiding to dirty the sealing gasket and its contact surface. It is therefore necessary before

-If the gasket is damaged, deformed or not in perfect conditions it is necessary to change it

-it is essential to do a frequent cleaning of the glass and of the outer surface of the fixture to avoid build up of mud and dirtiness resulting in dangerous overheating due to uncorrect light and heat dissipation.

-Clean carefully the glass screen removing limestone deposits by means of a scraper.

The replacement must be done by a qualified electrician.

INSTALLATION:

-SWITCH-OFF THE POWER SUPPLY BEFORE CARRYING OUT ANY MAINTENANCE OPERATION

- 1 Open the luminaire unscrewing 3 screws using the hexagonal tool (included in the package) (pic 1 -2)
- 2 Remove ring and plafo reflector pic 3
- 3 Drill holes and place plugs type "fischer" (not included in the package) (pic 4)
- 4 Insert the cable into the bacle gland (pic 5-6)
- 5 Place the luminaire to the wall thighten the fixing screws of the Fisher plug (pic 7)
- 6 Make the electrical connection (8)
- 7 Remount the rings and reflector by tighten three screws using the hexagonal tool (pic 9)

